



# Installation Instructions

## 76631 ,76641 SRC Side Armor / Rocker Guards

### 87-06 Wrangler

**NOTE:** Please read this information before installing. To obtain correct installation, we recommend you to follow these step by step installation instructions carefully. Please take care when installing this product to protect the finish and your investment. **DRILLING REQUIRED**

**Step One:** Locate hardware and check contents with the hardware listed below.

QTY	DESCRIPTION
1	Side Guard Set (Left and Right)
16	3/8" x 1" Self Tapping Bolts


**Step Two:** Position the Guard up to the frame. Maintain a 1/2" minimum between the bottom of vehicle and the top of the Guard. Move the Guard from front to back till is parallel to the side of the frame. Also make sure it is parallel to the bottom of the vehicle. Assistance is recommended while positioning Guard up to frame.

**Step Three:** Mark the side of the frame through the mounting holes located in the Guard Bracket. Then place Guard aside. Center punch the frame where you marked and drill a 5/16" hole in the frame. **CAUTION:** Before drilling be sure to check the backside of the frame for possible hazards or obstructions.

**Step Four:** Position Guard back to the frame and line up holes in the mounting brackets with just drilled holes in the frame. Secure the Guard to the frame with the included 3/8" x 1" Self Tapping bolts. Fully tighten all hardware at this time. Be sure to use all hardware supplied and tighten all bolts.

**Step Five:** Repeat steps two through four for the opposite side.

**Side Rocker Guard Shown**

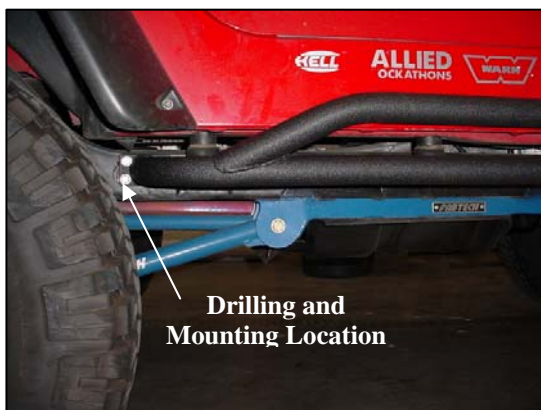

**Side Armor Guard Shown**



Rampage Products, LLC 9225 Stellar Court Unit C, Corona, CA 92883-4919  
Phone: (951) 277-4949 Fax: (951) 277-2295  
Web: [info@rampageproducts.net](mailto:info@rampageproducts.net)  
Made in China