



PART#:86612 Installation Instructions


Rampage Hi Lift jack mount Jeep Wrangler 2007+

PARTS LIST

- | | |
|------------------------------------|---------------------------------|
| 1 - Upper Mount A | 1 - Wing bolt |
| 1 - Upper Mount B | 1 - 1/4-20 x 3/4 |
| 1 - Lower Mount | 1 - 1/4-20 nylock |
| 1 - Knob | 1 - 5/16-18 x 2.5 carriage bolt |
| 3 - Mounting bolts 8mm-1.25 x 70mm | 7 - 8mm washer. |
| 1 - Wing nut | 2 - spacers |

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- 2. Carefully remove the plastic shrouds from the hinges. They snap in place on the right side of the hinge and can be pried loose with a slotted screwdriver. Please contact your local dealer for any assistance if needed.**
- 3. Use the included templates to locate the centers for a 7/8" wood-boring bit to drill the clearance holes for the jack mount. Important: Wear eye protection and be very careful when drilling the holes.**
- 4. Assemble the upper mount as shown in the picture.**
- 5. With the tailgate closed and firmly latched, use a socket wrench to remove the right side bolt on the top hinge. Re-install the plastic shroud onto the upper hinge. Install the upper jack mount in place with an 8mm x 70 bolt. Important: Do not loosen or remove the left bolt or the lower hinge bolts at this time.**
- 6. Once the upper mount is installed and tightened, remove the two lower hinge bolts. Re-install the lower plastic shroud onto the hinge. Now install the lower mount with the 70mm mounting bolts and washers. Tighten securely.**
- 7. Re-install the shroud onto the top mount.**
- 8. Place the Jack onto the lower mount and insert the upper mount through the jack. Use the nut on the upper mount to adjust the angle the jack rests at on the mount, when satisfied with position, install the upper knob loosely.**
- 9. Now use the wing nut, 2 washers and wing bolt to secure the jack to the lower mount. Tighten the knob and the wing nut/bolt. Important: Be sure to check the tightness of all of the fasteners on a regular basis. Failure to do this can lead to tailgate damage.**

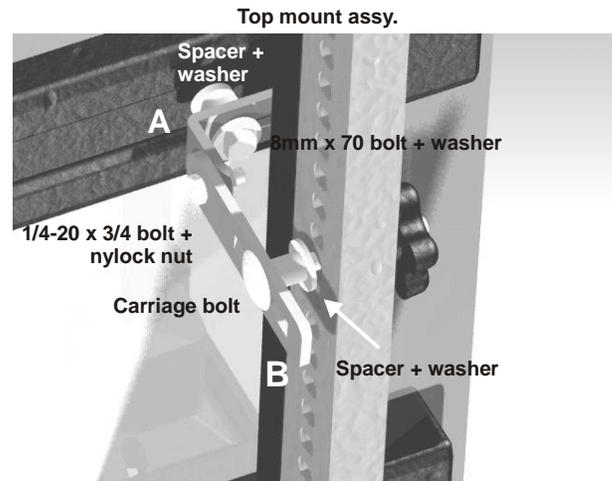

For Technical Support, please call (951) 277-4949

This product is guaranteed to be free of defects in materials and workmanship for a period of 12 months
Rampage Products, Corona Ca.

Made In USA

Page 1 of 2

Jeep JK Plastic hinge shroud drill pattern

Cut out each pattern and place on front of hinge to locate drill point.

Use 7/8" wood boring bit to drill hole.

