

# Installation Instructions

## Jeep YJ & TJ Universal Half Door Arm Rest Pad

### Part # 5954XX

#### Step #1

Locate the pins on the bottom of the part. One pin is fixed. The other pin has a slot for adjustment. Turn the slotted pin 2 to 3 turns counter clockwise to loosen. Slide the pin to the correct adjustments shown below.

YJ 87-95      Center pin  
TJ 97-04      Pin holes offset

With the slotted pin facing the rear of the vehicle and armrest pad in the upright position the pin should be adjusted:

**Drivers**, Pin to the right (closer to inside of vehicle)


**Passenger**, Pin to the left (closer to inside of vehicle)

Tighten pin snugly, do not over tighten

#### Step #2

Insert Armrest pad into the center and rear-locating hole on the vehicle. Enjoy your new armrest pads.

**Please note: When removing the Armrest, Lift from both ends simultaneously to release the pins without damage.**

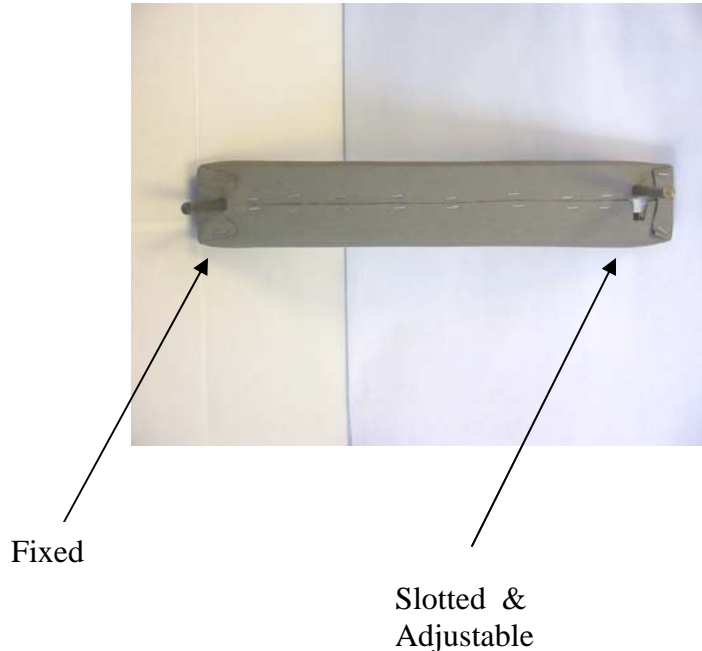

Rampage Products  
9225 Stellar Court, Unit C  
Corona CA 92883  
Tel: (951) 277-4949  
Fax: (951) 277-2295



**Made In China**