

Installation Instructions

Jeep YJ & TJ Universal Half Door Arm Rest Pad

Part # 5954XX

Step #1

Locate the pins on the bottom of the part. One pin is fixed. The other pin has a slot for adjustment. Turn the slotted pin 2 to 3 turns counter clockwise to loosen. Slide the pin to the correct adjustments shown below.

YJ 87-95 Center pin
TJ 97-04 Pin holes offset

With the slotted pin facing the rear of the vehicle and armrest pad in the upright position the pin should be adjusted:

Drivers, Pin to the right (closer to inside of vehicle)


Passenger, Pin to the left (closer to inside of vehicle)

Tighten pin snugly, do not over tighten

Step #2

Insert Armrest pad into the center and rear-locating hole on the vehicle. Enjoy your new armrest pads.

Please note: When removing the Armrest, Lift from both ends simultaneously to release the pins without damage.

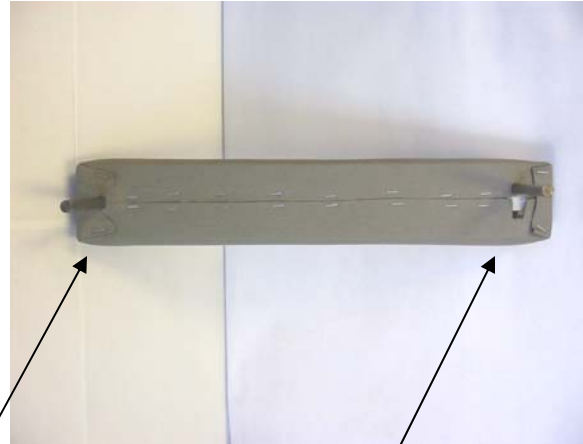

Fixed

Slotted &
Adjustable



Rampage Products
9225 Stellar Court, Unit C
Corona CA 92883
Tel: (951) 277-4949
Fax: (951) 277-2295



Made In China