

## Tonneau Top Boot, 97-06 Jeep Wrangler w/ Factory Soft Top, Channel Mount,

**Included Components:**

1-Tonneau Top Boot

**Warning:** For the Tonneau Top Boot to install properly, your Wrangler needs factory soft top belt rails, factory bow assembly, and factory rear tailgate bar.

Before you begin, the temperature of the Tonneau Top Boot should be above 70 degrees Fahrenheit. We suggest laying the Tonneau Top Boot in the sunlight for 1 hour before installation.

1. Lay the Tonneau Top Boot over vehicle and wrap around the roll bar at the rear of the vehicle (Figure 1).

Figure 1



2. Unzip the front of the Tonneau Top Boot and slip the lower end under the bars on the passenger side rear as shown (Figure 2 for YJ & Figure 3 for TJ). Repeat for the driver side.

Figure 2 (YJ shown)



Figure 3 (TJ shown)



3. Lift the flap on rear of the Tonneau Top Boot and slide factory tailgate channel on the Tonneau Top Boot retainer (Figure 4). Insert tailgate channel (not included) back onto vehicle (Figure 5).

Figure 4



Figure 5




4. Slide in and secure the plastic tab at the bottom end of the fabric into the factory channel. Complete for the driver, passenger, and rear sides (Figures 6 & 7).

Figure 6



Figure 7

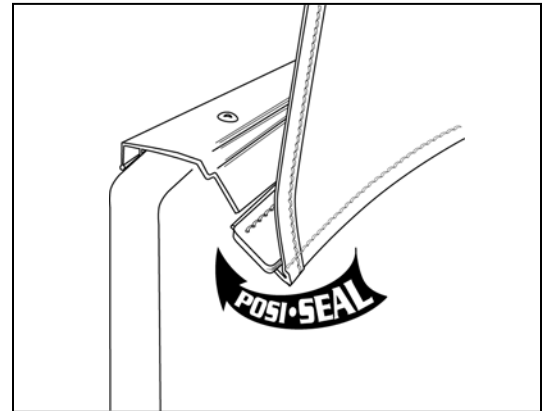

5. Wrap the front corner straps around the front roll bar, place into buckle and tighten. Complete for both the passenger and driver sides of the vehicle (Figures 8 & 9).

Figure 8

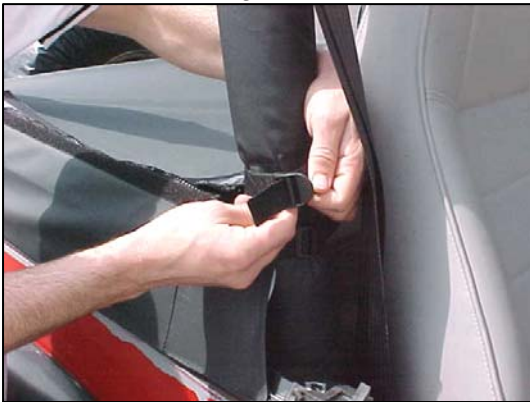


Figure 9



Figure 10

- Secure the Velcro flaps around the roll bar at the rear of the vehicle. Complete for both the driver and passenger sides (Figure 10).



- Zip the Tonneau Top Boot together as shown for the driver side (Figure 11). Wrap over the Velcro flap (Figure 12). Complete for both sides of the vehicle and installation is finished (Figure 13).

Figure 11



Figure 12



Figure 13



## How to convert the Tonneau Cover into a Top Boot

- Undo the passenger and driver Velcro flaps that cover the zipper and unzip the top (Figure 14). Complete for both the driver and passenger sides.


Figure 14

Velcro flap



9. Roll back the centerpiece to the rear door (Figure 15).

Figure 15

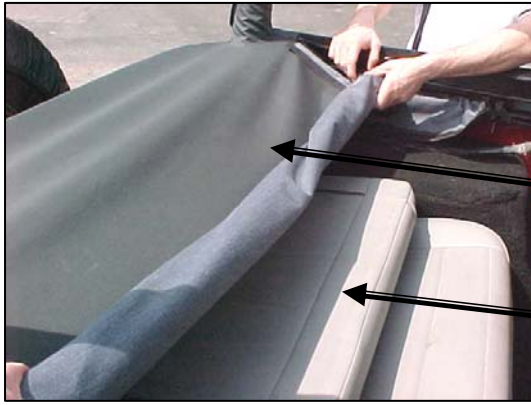

Roll the centerpiece behind the rear seat

Rear Seat folded down

10. Undo the passenger and driver's side Velcro over the zipper. Attach Velcro Strip 1 to the Velcro under the zipper. Attach the Velcro Strip 2 to the Velcro on top and over the zipper of Tonneau Top Boot (Figures 16 & 17). Top Boot installation is complete (Figure 18).

Figure 16



Velcro Strip 2

Velcro Strip 1

Figure 17



Figure 18



Tonneau Top Boot installed with the center portion rolled back.

Rampage Products  
9225 Stellar Court Unit C, Corona, CA 92883-4919, U.S.A.  
Phone: (951) 277-4949 Fax: (951) 277-2295  
e-mail: [info@rampageproducts.net](mailto:info@rampageproducts.net)  
Web: [www.rampageproducts.net](http://www.rampageproducts.net)  
*Made in China*