

## Acoustic Brief/California Brief

1992-1995 Wrangler

**Included Components:**

1- Brief

If your Wrangler does not have a soft top Windshield Channel, your installation requires the purchase of an aftermarket Windshield Channel (Rampage Products Part # 90101)

Before you begin, the temperature of the Brief should be above 70 degrees Fahrenheit. We suggest laying the Brief in the sunlight for 1 hour before installation.

1. Locate the front edge and fold over (Figure 1).

Figure 1



2. Place the Brief on top of Jeep. Insert folded edge into Windshield Channel, working from one side of vehicle to the other (Figures 2 & 3).

Figure 2



Figure 3



3. Lay the back of the Brief over the central roll bar and pull the rear corner straps (Figure 4).

Figure 4



4. Pull the straps under the central roll bar through the Side Loops #1, then pull the straps towards the rear of the vehicle and insert through the Rear Loops #2 (Figures 5 & 6). Attach the strap to the mating buckle #3 (Figures 6 & 7).

Figure 5

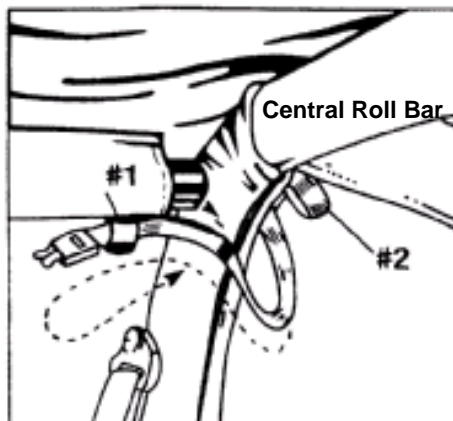


Figure 6

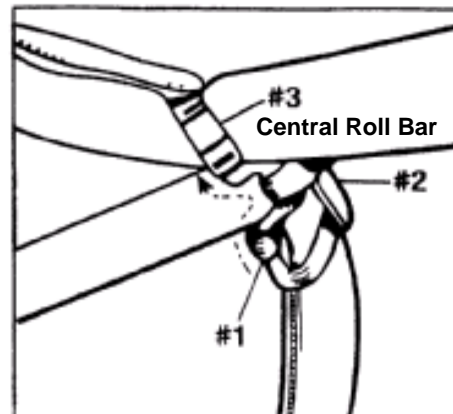


Figure 7



5. Locate the Velcro straps on each side of the roll bar. Wrap the straps around roll bar and fasten. Do both the driver and passenger sides of the vehicle (Figure 8).

Figure 8



6. Locate the center strap along the central roll bar. Run the center strap around the rear and under the central roll bar forward to the Footman Loop near the top center of the windshield. Run strap through Footman Loop and feed strap through its buckle securely (Figure 9).

Figure 9



7. Re-adjust Velcro and tighten all straps to assure a wrinkle-free fit.

Rampage Products  
9225 Stellar Court Unit C, Corona, CA 92883-4919, U.S.A.  
Phone: (951) 277-4949 Fax: (951) 277-2295  
e-mail: [info@rampageproducts.net](mailto:info@rampageproducts.net)  
Web: [www.rampageproducts.net](http://www.rampageproducts.net)  
*Made in China*