





## 26227 Slimline 2" Sidebar with Step Ford F150 Crew Cab, 2009-

### Included:

- Step bar driver side
- Step bar passenger side
- Hex nut x 12
- Flat washer x 12
- Lock washer x 12

### Installation:

- 1) Review components and instructions. Set out the driver side and passenger side bars. Split hardware between the two sides. (Note the direction of the bar on the vehicle, see Fig 1.)
- 2) Have a helper hold the bar on one end. Place bar on side of cab and insert bolt studs through the pinch weld at pre-existing locations.
- 3) Use the included nuts and washers to fasten the bar to the vehicle.
- 4) Tighten all fasteners and then repeat procedure for other side.

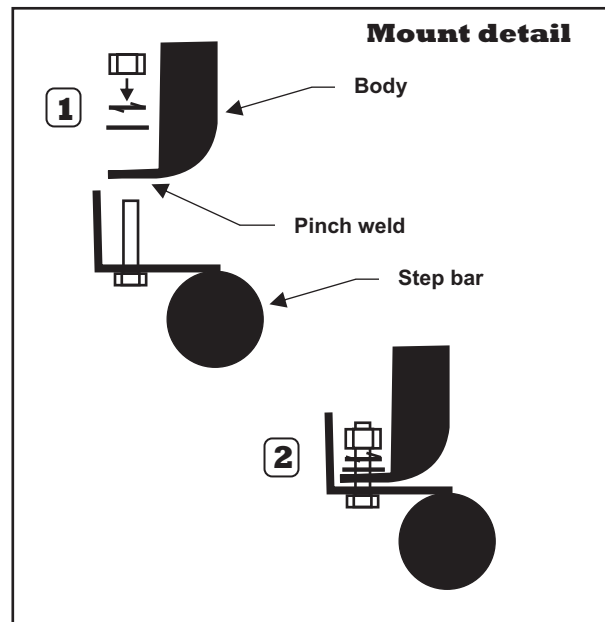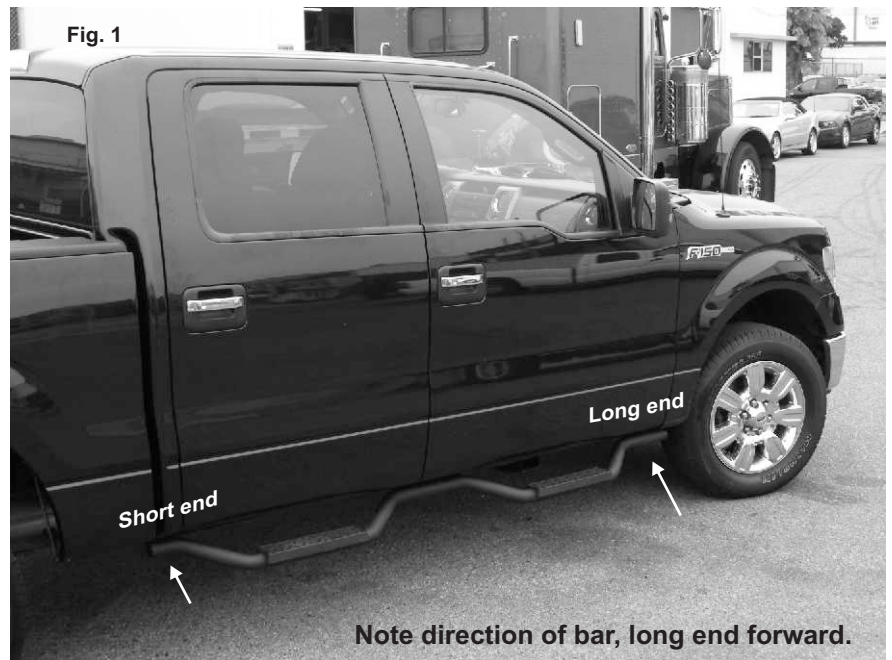

### Warranty Information

Rampage products, Inc. warrants to the original purchaser of any step product it manufactures, that the product will be free of defects in material or workmanship for a period of 1 year from date of purchase. Such obligations under this warranty shall be limited to the repair or replacement, at Rampage products discretion, of any assembly or parts which, upon examination by Rampage products, Inc. proves to be defective. All defective items must be returned with proof of purchase to Rampage products, Inc., freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Rampage products obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and Rampage products, Inc. shall not be liable for any incidental or consequential damages arising from breach of this or any implied warranty.

Rampage Products 22420 Temescal Canyon Rd. Ste "C", Corona, CA 92883 Phone: (951) 277-4949 Fax: (951) 277-2295  
[www.rampageproducts.net](http://www.rampageproducts.net)