



# Installation Instructions


## Soft Top Disconnects

### 97-06 Wrangler Set of 4

**NOTE:** Please read this information before installing. Rampage Products is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.


#### INCLUDED COMPONENTS

DESCRIPTION	QTY
Large Billet Disconnects	2
Small Billet Disconnects	2
Locking Pin with Clip	4
Small Machine Screws	4
Small Washers	4


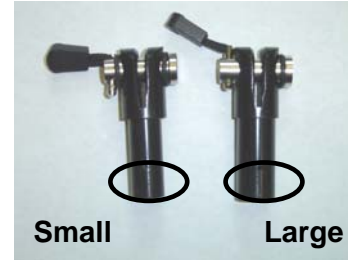


#### **INSTALLATION INSTRUCTIONS**

1. Remove bow assembly from vehicle. Carefully drill out rivets holding the disconnect (Figure 1) and remove plastic disconnect.
2. Locate Small Billet Disconnects and insert them into the front bow assembly. Secure with machine screws and washers included (Figure 2).
3. Repeat steps 1 and 2 to install the Large Billet Disconnects into the rear bow assembly.

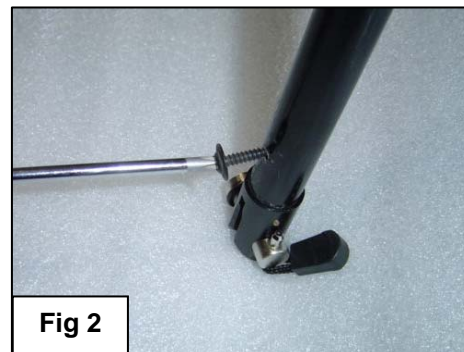

4. Remove clip from pin, then remove pin from Billet Disconnect
5. To re-install bow assembly to vehicle, simply line up holes on the New Billet Disconnect to the hole on the factory bracket already installed. Once holes line up, insert pin. Secure it by inserting Clip (Figure 4).

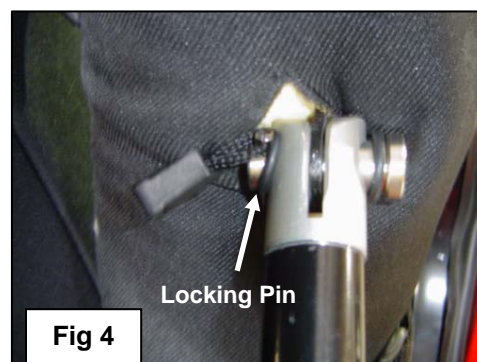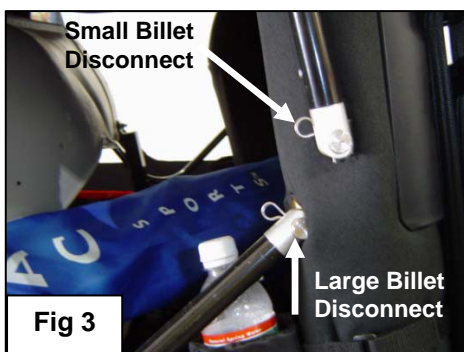

This product is guaranteed to be free of defects in materials and workmanship for a period of 90 days from consumer purchase date.

Rampage Products  
 9225 Stellar Court Unit C, Corona, CA 92883-4919, U.S.A.  
 Phone: (951) 277-4949 Fax: (951) 277-2295  
 Web: [www.rampageproducts.net](http://www.rampageproducts.net)  
*Made in China*