



## **Installation Instructions**

### **Combo Top, 92-2006 YJ and TJ Wrangler**

Part numbers covered by these instructions: 94015, 94017, 94101, 94215, 94217, 94301

**If your Jeep did not come with a soft top or windshield channel is missing, you will need to purchase a windshield channel from your Rampage Products distributor, ask for part number 901001 for 92-95 Wranglers or 901004 for 97-06 Wranglers**

#### **IMPORTANT NOTICE:**

Carefully read the instructions before attempting to install this product. Rampage Products is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.


Your new Combo Top is intended to be used as an Island Topper or a Brief. These instructions cover the installation as a complete Island Topper. After you have completed the installation of the Combo Top as an Island Topper, you can then remove the rear portion by loosening the rearmost straps with J hooks and unzipping the center zipper along the center roll bar. A small storage bag is included so that you may stow the rear portion when not in use.

#### **INCLUDED COMPONENTS**

- 1 – 2 piece Combo Top with Pre Installed straps
- 2 – “J” Hooks
- 1 - Rear Portion Storage Bag

#### **INSTALLATION INSTRUCTIONS**

- 1) Unfold the Combo Top and lay it in direct sunlight for at least 30 minutes. For best results the temperature should be over 70 degrees. If it is not you can still install the Combo Top but you will need to tighten the straps after use until it stretches smooth.
- 2) Pull the Combo Top towards the front of the Jeep and lay over windshield channel (Figure 1).

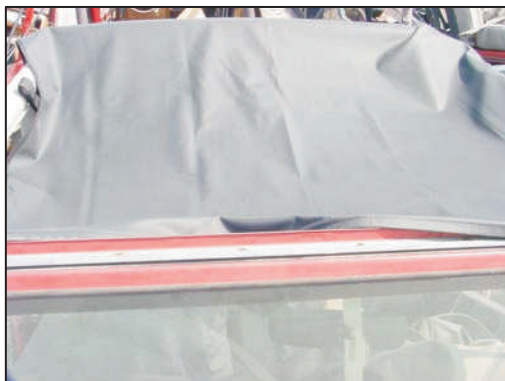


**Figure 1**

- 3) Fold the plastic strip under and insert into windshield channel (Figure 2 & 3). Center the Combo Top in the channel by pulling from either side as necessary.



**Figure 2**

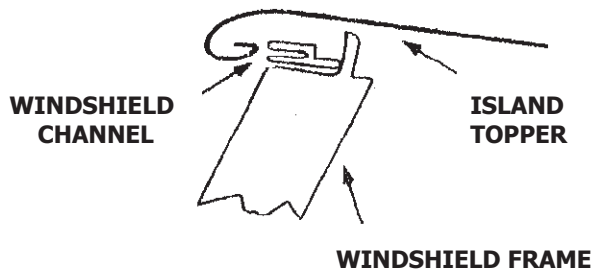

**Figure 3**

- 4) Pull the center strap around center roll bar and pull back toward windshield and attach to Factory Footman's Loop.
- 5) Loosely wrap the Velcro straps around the roll bar (Figure 4). Attach Loosely.
- 6) Pull the Combo Top towards the rear of the Jeep and along the rear roll bar.
- 7) Insert the two Long straps through the J-Hooks and thread through the Buckle pulling them tight (Figure 5).



**Figure 4**



**Figure 5**

- 8) Once the J-Hooks are attached to the rear harness, place the J-Hooks under the rear lip of the Jeep and tighten (Figure 6).



**Figure 6**

- 9) Once the Rear J Hooks are attached, you can go back and wrap the remaining straps around top of center roll bar posts and secure.

- 10) Now go back to the side straps and pull each of the side straps tight, working from the front of the vehicle towards the rear. May be necessary to re-tighten the straps after driving.

For Technical Support, please call: 951-277-4949

**Rampage Products Corona, CA 92883**  
**Phone: (951) 277-4949**  
**e-mail: [info@rampageproducts.net](mailto:info@rampageproducts.net)**  
**Web: [www.rampageproducts.com](http://www.rampageproducts.com)**  
***Made in China***