




## Installation Instructions Xtremeline Bars All lengths

**Note:** These instructions only cover the assembly/adjustment and care of the bars themselves. Installation instructions are included in the hardware kits for the mounting brackets. The bracket kits are provided separately for the required application.

### Included:

- 1x Left bar assembly
- 1x Right bar assembly

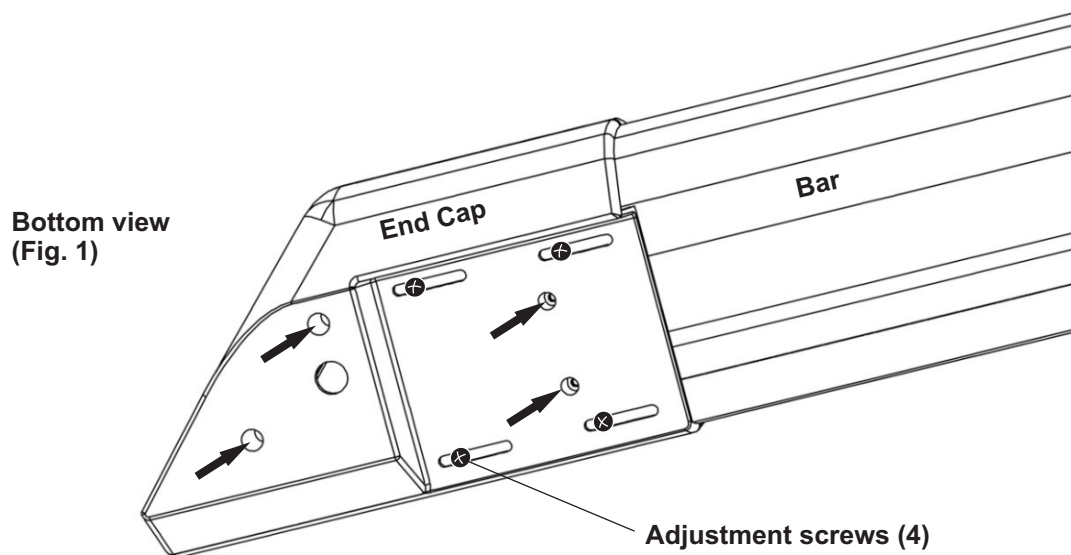

### END CAP ADJUSTMENT:

The end caps of the Xtremeline Bars can be adjusted to help match the length of the required truck/SUV or to shift the step pads slightly to the installers preference. By loosening the adjustment screws shown in Figure 1 and the end cap assembly screws indicated by the black arrows, the end caps can be moved the length of the slots.

**NOTE:** Be careful to loosen the assembly screws far enough so the plastic will not damage the finish on the outside of the bar when adjusted.

### CARE:

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish.

Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

Rampage Products Inc., Corona, CA 92883-4919

Phone: (951) 277-4949 Fax: (951) 277-2295

Web: [www.rampageproducts.com](http://www.rampageproducts.com)

Made in Taiwan